postpro3D™
AUTOMATED FINISHING SOLUTION FOR 3D PRINTING

Returning a Canister

When a Virgin canister is empty, or a Recovery canister is full it needs to be returned to Additive Manufacturing Technologies.

Please use all the original packaging supplied from AMT to return the canister.

Please follow the below instructions:

1. Empty the vermiculite from the drum into a plastic bag, so the drum is empty.
2. Use tape to cover the ends of the quick release and low level sensor connections.
3. Place the canister inside a plastic bag and seal using tape.
4. Put the bag containing the canister into the drum.



5. Empty the bag of vermiculite into the drum and place the empty bag into the canister.

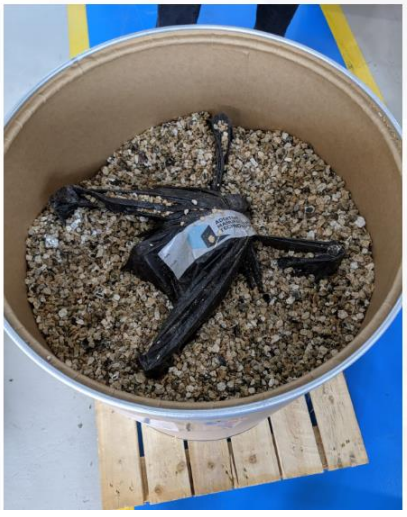

6. Seal the drum
7. Strap the drum to the pallet.

For further information please contact support@amtechnologies.com

ADDITIVE MANUFACTURING TECHNOLOGIES



8. Notify AMT when ready for collection.
9. AMT will arrange for collection of the used canister.